



How to Program Your TV

All TV's must have a built-in digital QAM and MPEG-4 tuner to work with the digital TV system

Most TV's manufactured in the United States have QAM and MPEG-4 tuners especially new Samsung, LG, Vizio, and Sony TVs

Certain models of the following TV's DO NOT have a QAM tuner: Element, Hisense, Seiki, RCA, Westinghouse, Proscan and other brands may apply. These TV's that are MPEG-2 will require a digital to analog converter

Each TV has slight variations to programming and you can find the exact directions to program your TV via your TV Manufacturer's website or instruction manual.

- 1) Go to " Menu"
- 2) From here, go to " Set-Up"
- 3) If you are prompted to choose between " Off-Air/Antenna" and " Cable" , choose " Cable"
- 4) Go to " Auto Program"
- 5) When you depress the " Auto Program" button your television will begin to automatically scroll through the channels. This can take between 5 – 30 minutes depending on the TV. Make sure you allow the auto programming to fully complete.
- 6) Save the changes and exit

If you have a Roku TV:

- 1) Click on Home
- 2) Select Antenna
- 3) Press the * button on the remote control to start programming if it doesn't begin automatically

If your TV is asking you to put in a code, please call the Manufacturer of your TV
